

POWERED BY  
**LENMAR**<sup>®</sup>

Includes tip adapters shown below:



RETRACTABLE  
USB CABLE



SAMSUNG<sup>®</sup>  
INSTINCT  
BLACKJACK<sup>™</sup> II  
BEHOLD  
UPSTAGE/SYNC  
FLIPSHOT/JUKE  
& MANY MORE



RAZR<sup>™</sup>  
BLACKBERRY<sup>®</sup>  
& OTHER  
MINI-USB  
COMPATIBLE  
DEVICES



MOTOROLA<sup>®</sup> Q9  
RAZR<sup>™</sup> V8/9  
BLUE ANT X3  
& OTHER  
MICRO-USB  
COMPATIBLE  
DEVICES



LG<sup>®</sup>  
CHOCOLATE  
MUZIQ/ENV/TRAX  
RUMOR/VOYAGER  
VX5400/8350  
VX8500-8800  
VX9400/9900



IPHONE<sup>™</sup>,  
IPOD<sup>®</sup> MINI/  
NANO/CLASSIC/  
VIDEO & OTHERS



## PowerPort Solar Charger & Battery

Manufacturer	Model number	Lenmar Tip
Apple	iPhone	Apple Tip
Apple	iPhone 3G	Apple Tip
Apple	iPhone 3GS	Apple Tip
Apple	iPod	Apple Tip
Apple	iPod classic	Apple Tip
Apple	iPod Touch	Apple Tip
Apple	iPod mini	Apple Tip
Apple	iPod nano	Apple Tip
Apple	iPod nano video	Apple Tip
Apple	iPod photo	Apple Tip
Apple	iPod U2 SE	Apple Tip
Apple	iPod video	Apple Tip
AT&T	E220	Micro-USB
Belkin	Skype	Mini-USB
Belkin	Skype WiFi F1PP000GN-SK	Mini-USB
BlackBerry	5790	Mini-USB
BlackBerry	5820	Mini-USB
BlackBerry	6210	Mini-USB
BlackBerry	6220	Mini-USB
BlackBerry	6230	Mini-USB
BlackBerry	6280	Mini-USB
BlackBerry	6510	Mini-USB
BlackBerry	7210	Mini-USB
BlackBerry	7230	Mini-USB
BlackBerry	7250	Mini-USB
BlackBerry	7280	Mini-USB
BlackBerry	7290	Mini-USB
BlackBerry	7510	Mini-USB
BlackBerry	7520	Mini-USB
BlackBerry	8800	Mini-USB
BlackBerry	8820	Mini-USB
BlackBerry	8830	Mini-USB

BlackBerry	7100g	Mini-USB
BlackBerry	7100i	Mini-USB
BlackBerry	7100r	Mini-USB
BlackBerry	7100t	Mini-USB
BlackBerry	7100v	Mini-USB
BlackBerry	7100x	Mini-USB
BlackBerry	7105t	Mini-USB
BlackBerry	7130c	Mini-USB
BlackBerry	7130e	Mini-USB
BlackBerry	7130g	Mini-USB
BlackBerry	7130v	Mini-USB
BlackBerry	8100g	Mini-USB
BlackBerry	8700c	Mini-USB
BlackBerry	8700f	Mini-USB
BlackBerry	8700g	Mini-USB
BlackBerry	8700r	Mini-USB
BlackBerry	8700v	Mini-USB
BlackBerry	8703e	Mini-USB
BlackBerry	8705g	Mini-USB
BlackBerry	8707g	Mini-USB
BlackBerry	8707h	Mini-USB
BlackBerry	8707v	Mini-USB
BlackBerry	8800g	Mini-USB
BlackBerry	Bold 9000	Mini-USB
BlackBerry	Curve 8300	Mini-USB
BlackBerry	Curve 8310	Mini-USB
BlackBerry	Curve 8310 (red)	Mini-USB
BlackBerry	Curve 8320	Mini-USB
BlackBerry	Curve 8330	Mini-USB
BlackBerry	Pearl 8100	Mini-USB
BlackBerry	Pearl 8110	Mini-USB
BlackBerry	Pearl 8120	Mini-USB
BlackBerry	Pearl 8130	Mini-USB
BlackBerry	Curve 8350i	Mini-USB
BlackBerry	Curve 8900	Micro-USB
BlackBerry	Pearl 8100 (black)	Mini-USB
BlackBerry	Pearl 8100 (blue)	Mini-USB
BlackBerry	Pearl 8100 (pale gold)	Mini-USB
BlackBerry	Pearl 8100 (sunset)	Mini-USB
BlackBerry	Pearl 8120 (blue)	Mini-USB
BlackBerry	Pearl 8120 (titanium)	Mini-USB
BlackBerry	Pearl 8130 (amethyst)	Mini-USB
BlackBerry	Pearl 8130 (silver)	Mini-USB
BlackBerry	Pearl Flip 8200 Series	Micro-USB
BlackBerry	Red Pearl 8100	Mini-USB
BlackBerry	Storm 9530	Micro-USB
BlackBerry	White Pearl 8100	Mini-USB
BlueAnt	SUPERTOOTH	Mini-USB
BlueAnt	SUPERTOOTH LIGHT	Mini-USB
BlueAnt	SUPERTOOTH 3	Mini-USB
callpod	Dragon	Mini-USB
Casio	G`zOne BOULDER	PPT-LG2
Creative	ZEN 8GB	Mini-USB
Creative	Zen Stone	Mini-USB
Creative	Zen Stone Plus	Mini-USB

Creative	ZEN X-Fi	Mini-USB
Cricket	A100	Mini-USB
Cricket	EZ	Mini-USB
Garmin	Edge 205	Mini-USB
Garmin	Edge 305	Mini-USB
Garmin	Edge 605	Mini-USB
Garmin	Edge 705	Mini-USB
Garmin	Forerunner 205	Mini-USB
Garmin	Forerunner 301	Mini-USB
Garmin	Forerunner 305	Mini-USB
Garmin	Forerunner 405	Mini-USB
HP	iPAQ 111 Classic Handheld	Mini-USB
HP	iPAQ 210	Mini-USB
HP	iPAQ 310 Travel Companion	Mini-USB
HP	iPAQ 510 Voice Messenger	Mini-USB
HP	iPAQ 514 Messenger	Mini-USB
HP	iPAQ rx5915 Travel Companion	Mini-USB
HP	iPAQ Travel Companion rx5910	Mini-USB
HP	iPAQ Travel Companion rx5915	Mini-USB
HP	iPAQ 211 Enterprise	Mini-USB
HP	iPAQ Business Messenger 910	Mini-USB
Insignia	NS-8V24	Mini-USB
Insignia	NS-CNV10	Mini-USB
Insignia	NS-CNV20	Mini-USB
Insignia	NS-DV2G	Mini-USB
Insignia	NS-DV4G	Mini-USB
Insignia	NS-DVB4G	Mini-USB
Insignia	Sport NS-DA1G	Mini-USB
Insignia	Sport NS-DA2G	Mini-USB
iqua	BHS-302	Mini-USB
iqua	BHS-303	Mini-USB
iqua	BHS-603	Mini-USB
iriver	Clix GEN2	Mini-USB
Jabra	A125s	Mini-USB
Jabra	BT2010	Mini-USB
Jabra	BT2020	Mini-USB
Jabra	BT3030	Mini-USB
Jabra	BT530	Mini-USB
Jabra	BT620s	Mini-USB
Jabra	BT2070	Micro-USB
Jabra	BT4010	Micro-USB
Jabra	BT530	Micro-USB
Jabra	BT8040	Micro-USB
Jabra	JX20	Micro-USB
Jens of Sweden	MP-400	Mini-USB
Jens of Sweden	MP-450	Mini-USB
Jens of Sweden	MP-X	Mini-USB
Kodak	EasyShare picture viewer	Mini-USB
Kyocera	Mako S4000	Micro-USB
Kyocera	Neo E1100	Micro-USB
Kyocera	Tempo E2000	Micro-USB
Kyocera	TNT S2400	Micro-USB
Kyocera	Tomo S2410	Micro-USB
LG	HBM-500	Mini-USB
LG	285	PPT-LG2

LG	380	PPT-LG2
LG	385	PPT-LG2
LG	AX155	Micro-USB
LG	AX275	PPT-LG2
LG	AX300	Micro-USB
LG	AX565	PPT-LG2
LG	AX830	Micro-USB
LG	AX8600	PPT-LG2
LG	Banter AX265	Micro-USB
LG	Banter UX265	Micro-USB
LG	CE110	PPT-LG2
LG	CF360	Micro-USB
LG	CG180	PPT-LG2
LG	Cherry Chocolate	PPT-LG2
LG	Chocolate Flip 8600	PPT-LG2
LG	Chocolate KG800	PPT-LG2
LG	Chocolate VX8500	PPT-LG2
LG	Chocolate VX8550	PPT-LG2
LG	Chocolate VX8550 Black	PPT-LG2
LG	Chocolate VX8550 Dark Blue	PPT-LG2
LG	Chocolate VX8550 Dark Red	PPT-LG2
LG	Chocolate VX8550 Metallic Black	PPT-LG2
LG	Chocolate-Green	PPT-LG2
LG	Chocolate-Pink	PPT-LG2
LG	Chocolate-Red	PPT-LG2
LG	Cookie KP500	PPT-LG2
LG	CP150	Micro-USB
LG	CU515	PPT-LG2
LG	CU575	PPT-LG2
LG	ENV- ORANGE	PPT-LG2
LG	enV VX9900	PPT-LG2
LG	enV2 VX9100	Micro-USB
LG	enV3 VX9200	Micro-USB
LG	ENV-GREEN	PPT-LG2
LG	FLARE	PPT-LG2
LG	Glance VX7100	Micro-USB
LG	Glimmer UX830	Micro-USB
LG	HBM-520	PPT-LG2
LG	HBM-530	PPT-LG2
LG	HBM-730	PPT-LG2
LG	HBM-750	PPT-LG2
LG	HBM-755	PPT-LG2
LG	HBM-770	PPT-LG2
LG	HBS-200	PPT-LG2
LG	HBS-250	PPT-LG2
LG	Incite CT810	Micro-USB
LG	Invision CB630	PPT-LG2
LG	KEYBO 9100	Micro-USB
LG	KF300	Micro-USB
LG	KF510	PPT-LG2
LG	KF600	PPT-LG2
LG	KF700	PPT-LG2
LG	KG320	PPT-LG2
LG	KG810	PPT-LG2
LG	KS360	PPT-LG2
LG	LG830 Spyder	Micro-USB
LG	Lotus LX600	Micro-USB
LG	LX150	PPT-LG2

LG	LX160	PPT-LG2
LG	LX165	PPT-LG2
LG	LX400 Blue	Micro-USB
LG	LX400 Burgundy	Micro-USB
LG	Mint Chocolate	PPT-LG2
LG	MUZIQ LX570	PPT-LG2
LG	MUZIQ- PINK	PPT-LG2
LG	Neon GT365	Micro-USB
LG	Neon GT365	PPT-LG2
LG	PRADA KE850	PPT-LG2
LG	Renoir KC910	PPT-LG2
LG	Reveal LG600	Micro-USB
LG	Rhythm AX585	Micro-USB
LG	RUMOR	PPT-LG2
LG	Rumor2 LX265	Micro-USB
LG	Scoop	PPT-LG2
LG	Scoop	PPT-LG2
LG	Secret KF750	PPT-LG2
LG	SHINE CU720	PPT-LG2
LG	Shine KE970	PPT-LG2
LG	Shine Titanium KE970	PPT-LG2
LG	Shine U970	PPT-LG2
LG	Slyde M540	Micro-USB
LG	Swift AX500	Micro-USB
LG	The Wave AX380	PPT-LG2
LG	TRAX	PPT-LG2
LG	Tritan UX840	Micro-USB
LG	UX260	PPT-LG2
LG	UX300	Micro-USB
LG	UX380	PPT-LG2
LG	UX565	PPT-LG2
LG	UX585	Micro-USB
LG	Vantage 830	Micro-USB
LG	VENUS VX8800	PPT-LG2
LG	Versa VX9600	Micro-USB
LG	Viewty KU990	PPT-LG2
LG	Voyager VX10000	PPT-LG2
LG	VOYAGER VX10K	PPT-LG2
LG	Vu CU915	PPT-LG2
LG	Vu TV CU920	PPT-LG2
LG	VX5400	PPT-LG2
LG	VX5500	Micro-USB
LG	VX8350	PPT-LG2
LG	VX8360	Micro-USB
LG	VX8560 Chocolate 3	Micro-USB
LG	VX8600	PPT-LG2
LG	VX8610 Decoy	Micro-USB
LG	VX8700	PPT-LG2
LG	VX9400	PPT-LG2
LG	VX9700 Dare	Micro-USB
LG	White Chocolate	PPT-LG2
LG	Wine 280	Micro-USB
LG	Xenon GR500	Micro-USB
LG	A523	PPT-SG3
LG	HBM-310	PPT-LG2
Mio	Digi Walker 168	Mini-USB
Mio	Digi Walker 268	Mini-USB
Mio	Digi Walker 268+	Mini-USB

Mio	Digi Walker 269	Mini-USB
Mio	Digi Walker 269+	Mini-USB
Mio	Digi Walker 336BT	Mini-USB
Mio	Digi Walker 336g	Mini-USB
Mio	Digi Walker 336i	Mini-USB
Mio	Digi Walker 339	Mini-USB
Mio	Digi Walker 8390	Mini-USB
Mio	Digi Walker 8870	Mini-USB
Mio	Digi Walker A201	Mini-USB
Mio	Digi Walker A701	Mini-USB
Mio	Digi Walker C230	Mini-USB
Mio	Digi Walker C320	Mini-USB
Mio	Digi Walker C510	Mini-USB
Mio	Digi Walker C510E	Mini-USB
Mio	Digi Walker C710	Mini-USB
Mio	Digi Walker P350	Mini-USB
Mio	Digi Walker P550	Mini-USB
Mio	DigiWalker C220	Mini-USB
Mio	DigiWalker C310x	Mini-USB
Mio	DigiWalker C520	Mini-USB
Mio	DigiWalker C720	Mini-USB
Mio	DigiWalker H610	Mini-USB
Mio	Knight Rider GPS KITT 300	Mini-USB
Mio	Moov 200	Mini-USB
Mio	Moov 210	Mini-USB
Mio	Moov 300	Mini-USB
Mio	Moov 310	Mini-USB
Mio	Moov 330	Mini-USB
Mio	Moov 370	Mini-USB
Mio	Moov 500	Mini-USB
Mio	Moov 510	Mini-USB
Mio	Moov 560	Mini-USB
Mio	Moov 580	Mini-USB
Mio	C250	Mini-USB
Mio	C720b	Mini-USB
Mio	C725	Mini-USB
Mio	DigiWalker 168	Mini-USB
Mio	DigiWalker 268	Mini-USB
Mio	DigiWalker 268+	Mini-USB
Mio	DigiWalker 269	Mini-USB
Mio	DigiWalker 269+	Mini-USB
Mio	DigiWalker 336BT	Mini-USB
Mio	DigiWalker 336g	Mini-USB
Mio	DigiWalker 336i	Mini-USB
Mio	DigiWalker 339	Mini-USB
Mio	DigiWalker 8390	Mini-USB
Mio	DigiWalker 8870	Mini-USB
Mio	DigiWalker A201	Mini-USB
Mio	DigiWalker A501	Mini-USB
Mio	DigiWalker A701	Mini-USB
Mio	DigiWalker A702	Mini-USB
Mio	DigiWalker C230	Mini-USB
Mio	DigiWalker C320	Mini-USB
Mio	DigiWalker C510	Mini-USB
Mio	DigiWalker C510E	Mini-USB

Mio	DigiWalker C710	Mini-USB
Mio	DigiWalker P350	Mini-USB
Mio	DigiWalker P550	Mini-USB
Mio	Moov 360	Mini-USB
Mio	P350	Mini-USB
Mio	P360	Mini-USB
Mio	P560	Mini-USB
Motorola	A1200	Mini-USB
Motorola	A668	Mini-USB
Motorola	A70	Mini-USB
Motorola	A732	Mini-USB
Motorola	A780	Mini-USB
Motorola	A910	Mini-USB
Motorola	ACTV W450	Mini-USB
Motorola	C305	Mini-USB
Motorola	C362	Mini-USB
Motorola	C363	Mini-USB
Motorola	E1070	Mini-USB
Motorola	E610	Mini-USB
Motorola	E615	Mini-USB
Motorola	E680	Mini-USB
Motorola	E680i	Mini-USB
Motorola	E685	Mini-USB
Motorola	E770v	Mini-USB
Motorola	EM325	Mini-USB
Motorola	EM330	Mini-USB
Motorola	Extreme VA76r	Mini-USB
Motorola	H270	Mini-USB
Motorola	H3	Mini-USB
Motorola	H350	Mini-USB
Motorola	H375	Mini-USB
Motorola	H390	Mini-USB
Motorola	H500	Mini-USB
Motorola	H550	Mini-USB
Motorola	H605	Mini-USB
Motorola	H670	Mini-USB
Motorola	H700	Mini-USB
Motorola	H9	Mini-USB
Motorola	i335	Mini-USB
Motorola	i425	Mini-USB
Motorola	i876	Mini-USB
Motorola	ic402	Mini-USB
Motorola	ic502	Mini-USB
Motorola	ic902	Mini-USB
Motorola	KRZR K1	Mini-USB
Motorola	KRZR K1m	Mini-USB
Motorola	KRZR K3	Mini-USB
Motorola	KRZR maxx K3	Mini-USB
Motorola	L2	Mini-USB
Motorola	M300	Mini-USB
Motorola	m500	Mini-USB
Motorola	Ming A1200	Mini-USB
Motorola	Ming A1200e	Mini-USB
Motorola	MOTO Q9c	Mini-USB

Motorola	MOTO Qmusic9m	Mini-USB
Motorola	MOTOFONE F3	Mini-USB
Motorola	MOTONAV TN20	Mini-USB
Motorola	MotorolaQ	Mini-USB
Motorola	PEBL Red	Mini-USB
Motorola	PEBL U6	Mini-USB
Motorola	RAZR MAXX FERRARI V6	Mini-USB
Motorola	RAZR MAXX V6	Mini-USB
Motorola	RAZR maxx Ve	Mini-USB
Motorola	RAZR V3	Mini-USB
Motorola	RAZR V3 (RED)	Mini-USB
Motorola	RAZR V3 BLK	Mini-USB
Motorola	RAZR V3a	Mini-USB
Motorola	RAZR V3c	Mini-USB
Motorola	RAZR V3i	Mini-USB
Motorola	RAZR V3i Chrome White	Mini-USB
Motorola	RAZR V3i DG	Mini-USB
Motorola	RAZR V3im	Mini-USB
Motorola	RAZR V3m	Mini-USB
Motorola	RAZR V3r	Mini-USB
Motorola	RAZR V3s	Mini-USB
Motorola	RAZR V3t	Mini-USB
Motorola	RAZR V3x	Mini-USB
Motorola	RAZR V3xx	Mini-USB
Motorola	RAZR WIRE Mercury/Gray	Mini-USB
Motorola	RAZR WIRE Pewter/Black Iridium	Mini-USB
Motorola	RAZR WIRE Platinum/Gold Iridium	Mini-USB
Motorola	red RAZR V3i	Mini-USB
Motorola	red RAZR V3m	Mini-USB
Motorola	RIZR Z3	Mini-USB
Motorola	RIZR Z6tv	Mini-USB
Motorola	ROKR E2	Mini-USB
Motorola	ROKR E6	Mini-USB
Motorola	ROKR S9	Mini-USB
Motorola	ROKR Z6	Mini-USB
Motorola	ROKR Z6m	Mini-USB
Motorola	ROKR Z6w	Mini-USB
Motorola	SLVR (RED)	Mini-USB
Motorola	SLVR i-mode	Mini-USB
Motorola	SLVR L6	Mini-USB
Motorola	SLVR L7	Mini-USB
Motorola	SLVR L7c	Mini-USB
Motorola	SLVR L9	Mini-USB
Motorola	SLVR Z10	Mini-USB
Motorola	SVLR L7i	Mini-USB
Motorola	T305	Mini-USB
Motorola	T505	Mini-USB
Motorola	The Buzz ic602	Mini-USB
Motorola	V190	Mini-USB
Motorola	V191	Mini-USB
Motorola	V195	Mini-USB
Motorola	V197	Mini-USB
Motorola	V235	Mini-USB

Motorola	V320	Mini-USB
Motorola	V323	Mini-USB
Motorola	V323i	Mini-USB
Motorola	V325	Mini-USB
Motorola	V325i	Mini-USB
Motorola	V360	Mini-USB
Motorola	V361	Mini-USB
Motorola	V365	Mini-USB
Motorola	V660	Mini-USB
Motorola	VE240	Mini-USB
Motorola	VU204	Mini-USB
Motorola	W175	Mini-USB
Motorola	W177	Mini-USB
Motorola	W180	Mini-USB
Motorola	W220	Mini-USB
Motorola	W230	Mini-USB
Motorola	W260g	Mini-USB
Motorola	W315	Mini-USB
Motorola	W370	Mini-USB
Motorola	W372	Mini-USB
Motorola	W375	Mini-USB
Motorola	W376g	Mini-USB
Motorola	W377	Mini-USB
Motorola	W377g	Mini-USB
Motorola	W385	Mini-USB
Motorola	W490	Mini-USB
Motorola	W510	Mini-USB
Motorola	W755	Mini-USB
Motorola	Z8	Mini-USB
Motorola	Adventure V750	Micro-USB
Motorola	AURA	Micro-USB
Motorola	clutch i465	Micro-USB
Motorola	evoke QA4	Micro-USB
Motorola	H15	Micro-USB
Motorola	H555	Mini-USB
Motorola	H560	Micro-USB
Motorola	H620	Micro-USB
Motorola	H680	Micro-USB
Motorola	H681	Micro-USB
Motorola	H690	Micro-USB
Motorola	H710	Micro-USB
Motorola	H715	Micro-USB
Motorola	H721	Micro-USB
Motorola	H780	Micro-USB
Motorola	H800	Micro-USB
Motorola	hint QA30	Micro-USB
Motorola	i290	Mini-USB
Motorola	i576	Micro-USB
Motorola	i776	Micro-USB
Motorola	karma AQ1	Micro-USB
Motorola	Krave ZN4	Micro-USB
Motorola	MOTO Q9h	Micro-USB
Motorola	MOTO Qglobal	Micro-USB
Motorola	PURE H12	Micro-USB
Motorola	Rapture VU30	Micro-USB
Motorola	RAZR VE20	Micro-USB

Motorola	RAZR2 V8	Micro-USB
Motorola	RAZR2 V9 Mahogany	Micro-USB
Motorola	RAZR2 V9M Espresso	Micro-USB
Motorola	RAZR2 V9x	Micro-USB
Motorola	Renegade V950	Micro-USB
Motorola	rewew W233	Mini-USB
Motorola	rival A455	Micro-USB
Motorola	ROKR E8	Micro-USB
Motorola	ROKR U9	Micro-USB
Motorola	S9-HD	Mini-USB
Motorola	SoundPilot S705	Mini-USB
Motorola	stature i9	Micro-USB
Motorola	Tundra VA76r	Mini-USB
Motorola	Z10	Mini-USB
Motorola	Z6c world edition	Micro-USB
Motorola	Z9	Micro-USB
Motorola	Zine ZN5	Micro-USB
NAVMAN	F15	Mini-USB
Nextar	MA715	Mini-USB
Nokia	1006	Micro-USB
Nokia	1606	Micro-USB
Nokia	3606	Micro-USB
Nokia	6205	Micro-USB
Nokia	2605 Mirage	Micro-USB
Nokia	6500 Classic	Micro-USB
Nokia	7900 Crystal Prism	Micro-USB
Nokia	7900 Prism	Micro-USB
Nokia	8600 Luna	Micro-USB
Nokia	8800 Arte	Micro-USB
Nokia	8800 Sapphire Arte	Micro-USB
Nokia	BH-803	Micro-USB
Nokia	N85	Micro-USB
Nokia	N86	Micro-USB
Nokia	N97	Micro-USB
Palm	Treo 500V	Mini-USB
Palm	Treo Pro	Micro-USB
Philips	Go Gear SA2840	Mini-USB
Philips	Go Gear SA3025	Mini-USB
Philips	Go Gear SA3245	Mini-USB
Philips	Go Gear SA3325	Mini-USB
Philips	Go Gear SA5225	Mini-USB
Philips	Go Gear SA5245	Mini-USB
Philips	Go Gear SA5247	Mini-USB
Philips	Go Gear SA5285 8GB	Mini-USB
Philips	Go Gear SA5287	Mini-USB
Philips	Go Gear SA5295	Mini-USB
Plantronics	Discovery 925	Micro-USB
Plantronics	Explorer 220	Micro-USB
Plantronics	Explorer 230	Micro-USB
Plantronics	Explorer 360	Micro-USB
Plantronics	Explorer 370 Ruggedized	Micro-USB
Plantronics	Voyager 815	Micro-USB
Plantronics	Voyager 835	Micro-USB
Plantronics	Voyager 855	Micro-USB
Plantronics	Voyager PRO	Micro-USB
Rio	Carbon	Mini-USB
Rio	ce2100	Mini-USB
Samsung	NeXus 25 YP-X5X	Mini-USB

Samsung	NeXus 50 YP-X5Z	Mini-USB
Samsung	A516	PPT-SG3
Samsung	A737	PPT-SG3
Samsung	Access SGH-A827	PPT-SG3
Samsung	Ace SPH-i325	PPT-SG3
Samsung	Beat SGH-T539	PPT-SG3
Samsung	Behold SGH-T919	PPT-SG3
Samsung	BlackJack II SGH-I617	PPT-SG3
Samsung	Blast SGH-T729	PPT-SG3
Samsung	Cleo SCH-U440	PPT-SG3
Samsung	Delve SCH-R800	PPT-SG3
Samsung	Epix SGH-i907	PPT-SG3
Samsung	Eternity SGH-A867	PPT-SG3
Samsung	Finesse SCH-r810	PPT-SG3
Samsung	flipshot SCH-U900	PPT-SG3
Samsung	Giorgio Armani	PPT-SG3
Samsung	Gleam SCH-U700	PPT-SG3
Samsung	Glyde SCH-U940	PPT-SG3
Samsung	Gravity SGH-T459	PPT-SG3
Samsung	Helio Fin SPH-A513	PPT-SG3
Samsung	Highnote SPH-M630	Micro-USB
Samsung	Hue II SCH-R600	PPT-SG3
Samsung	Hue SCH-R500	PPT-SG3
Samsung	i200	PPT-SG3
Samsung	Instinct s30 SPH-M810	PPT-SG3
Samsung	Instinct SPH-M800	PPT-SG3
Samsung	JetSet SCH-R550	PPT-SG3
Samsung	Juke SCH-U470	PPT-SG3
Samsung	Katalyst SGH-T739	PPT-SG3
Samsung	Knack SGH-U310	PPT-SG3
Samsung	M210	PPT-SG3
Samsung	M8800 Pixon	PPT-SG3
Samsung	Memoir SGH-T929	PPT-SG3
Samsung	Messenger SCH-R450	PPT-SG3
Samsung	MyShot SCH-R430	PPT-SG3
Samsung	Mysto (Helio) SPH-A523	PPT-SG3
Samsung	Omnia	PPT-SG3
Samsung	Omnia SCH-i910	PPT-SG3
Samsung	Propel SGH-A767	PPT-SG3
Samsung	Propel SGH-i627	Micro-USB
Samsung	Propel SGH-i627	PPT-SG3
Samsung	Qbowl SGH-F700MBVVD2	PPT-SG3
Samsung	Rant SPH-M540	Micro-USB
Samsung	Renown SCH-U810	PPT-SG3
Samsung	Rugby A837	PPT-SG3
Samsung	Saga SCH-i770	PPT-SG3
Samsung	SCH-R200	PPT-SG3
Samsung	SCH-R210 Spex	PPT-SG3
Samsung	SCH-r211	PPT-SG3
Samsung	SCH-R300	PPT-SG3
Samsung	SCH-R310 Byline	PPT-SG3
Samsung	SCH-r410	PPT-SG3
Samsung	SCH-R610	PPT-SG3
Samsung	SCH-U430	PPT-SG3
Samsung	SCH-U706 Muse	PPT-SG3
Samsung	SGH-A117	PPT-SG3
Samsung	SGH-A127	PPT-SG3
Samsung	SGH-A137	PPT-SG3

Samsung	SGH-A226	PPT-SG3
Samsung	SGH-A227	PPT-SG3
Samsung	SGH-A237	PPT-SG3
Samsung	SGH-A516	PPT-SG3
Samsung	SGH-A517	PPT-SG3
Samsung	SGH-A637	PPT-SG3
Samsung	SGH-a657	PPT-SG3
Samsung	SGH-A736	PPT-SG3
Samsung	SGH-A737	PPT-SG3
Samsung	SGH-A746	PPT-SG3
Samsung	SGH-A777	PPT-SG3
Samsung	SGH-A877	PPT-SG3
Samsung	SGH-B100	PPT-SG3
Samsung	SGH-B130	PPT-SG3
Samsung	SGH-C180	PPT-SG3
Samsung	SGH-C250	PPT-SG3
Samsung	SGH-C450	PPT-SG3
Samsung	SGH-D880	PPT-SG3
Samsung	SGH-E210	PPT-SG3
Samsung	SGH-F110 miCoach	PPT-SG3
Samsung	SGH-F200	PPT-SG3
Samsung	SGH-F210	PPT-SG3
Samsung	SGH-F250	PPT-SG3
Samsung	SGH-F330	PPT-SG3
Samsung	SGH-F400	PPT-SG3
Samsung	SGH-F406	PPT-SG3
Samsung	SGH-F490	PPT-SG3
Samsung	SGH-G600	PPT-SG3
Samsung	SGH-G800	PPT-SG3
Samsung	SGH-G810	Micro-USB
Samsung	SGH-i400	PPT-SG3
Samsung	SGH-i450	PPT-SG3
Samsung	SGH-i550	PPT-SG3
Samsung	SGH-i560	PPT-SG3
Samsung	SGH-i610	PPT-SG3
Samsung	SGH-i616	PPT-SG3
Samsung	SGH-i640v	PPT-SG3
Samsung	SGH-i780	PPT-SG3
Samsung	SGH-J200	PPT-SG3
Samsung	SGH-J210	PPT-SG3
Samsung	SGH-J400	PPT-SG3
Samsung	SGH-J700	PPT-SG3
Samsung	SGH-j706	PPT-SG3
Samsung	SGH-L170	PPT-SG3
Samsung	SGH-L400	PPT-SG3
Samsung	SGH-L600	PPT-SG3
Samsung	SGH-L760	PPT-SG3
Samsung	SGH-L810	PPT-SG3
Samsung	SGH-M110	PPT-SG3
Samsung	SGH-M310	PPT-SG3
Samsung	SGH-M600	PPT-SG3
Samsung	SGH-M610	PPT-SG3
Samsung	SGH-P180	PPT-SG3
Samsung	SGH-P220	PPT-SG3
Samsung	SGH-P260	PPT-SG3
Samsung	SGH-P520	PPT-SG3
Samsung	SGH-P720	PPT-SG3
Samsung	SGH-T101G (TracFone)	PPT-SG3

Samsung	SGH-T109	PPT-SG3
Samsung	SGH-T119	PPT-SG3
Samsung	SGH-T201G (TracFone)	PPT-SG3
Samsung	SGH-T229	PPT-SG3
Samsung	SGH-T301G (TracFone)	PPT-SG3
Samsung	SGH-T336	PPT-SG3
Samsung	SGH-T339	PPT-SG3
Samsung	SGH-T409	PPT-SG3
Samsung	SGH-T429	PPT-SG3
Samsung	SGH-t439	PPT-SG3
Samsung	SGH-T639	PPT-SG3
Samsung	SGH-T819	PPT-SG3
Samsung	Slash SPH-M310	PPT-SG3
Samsung	SLM SGH-A747	PPT-SG3
Samsung	Smooth SCH-u350	PPT-SG3
Samsung	Solid SGH-M110	PPT-SG3
Samsung	Soul b SGH-U800	PPT-SG3
Samsung	Soul SGH-U900	PPT-SG3
Samsung	Spex	PPT-SG3
Samsung	SPH-M220	Micro-USB
Samsung	SPH-M300	PPT-SG3
Samsung	SPH-M305	PPT-SG3
Samsung	SPH-M320	Micro-USB
Samsung	SPH-M510	PPT-SG3
Samsung	SPH-M520	PPT-SG3
Samsung	SPH-M530	PPT-SG3
Samsung	SPH-Z400	PPT-SG3
Samsung	Sway SCH-U650	PPT-SG3
Samsung	Tocco SGH-F480	PPT-SG3
Samsung	Trance SCH-u490	PPT-SG3
Samsung	TwoStep SCH-r470	Micro-USB
SanDisk	Sansa Clip	Mini-USB
Sanyo	Katana Eclipse	Micro-USB
Sanyo	Katana Eclipse X	Micro-USB
Sanyo	Katana LX	Micro-USB
Sanyo	PRO-200	Micro-USB
Sanyo	PRO-700	Micro-USB
Sanyo	S1	Micro-USB
Skype	Netgear SPH101	Mini-USB
Sony	Walkman NW-E405	Mini-USB
Sony	Walkman NW-E407	Mini-USB
Sony	Walkman NW-E507	Mini-USB
Sony	Walkman NW-S205F	Mini-USB
Sony	Walkman NW-S205F	Mini-USB
Sony Ericsson	Xperia X1	Mini-USB
SOUTHWING	SA505	Mini-USB
TeleNav	Shotgun	Mini-USB
T-Mobile	Google G1	Mini-USB
T-Mobile	Sidekick 2008	Mini-USB
T-Mobile	Sidekick LX	Mini-USB
T-Mobile	Sidekick Slide	Mini-USB
TomTom	Go 520	Mini-USB
TomTom	Go 530	Mini-USB
TomTom	GO 540 LIVE	Mini-USB
TomTom	GO 630 Traffic	Mini-USB
TomTom	Go 720	Mini-USB

TomTom	GO 730	Mini-USB
TomTom	GO 730 Traffic	Mini-USB
TomTom	GO 740 LIVE	Mini-USB
TomTom	Go 920	Mini-USB
TomTom	Go 920T	Mini-USB
TomTom	GO 930	Mini-USB
TomTom	GO 930 Traffic	Mini-USB
TomTom	GO 940 LIVE	Mini-USB
TomTom	One	Mini-USB
TomTom	ONE 3rd Edition	Mini-USB
TomTom	ONE Europe	Mini-USB
TomTom	ONE Regional	Mini-USB
TomTom	ONE XL	Mini-USB
TomTom	ONE XL Europe	Mini-USB
TomTom	ONE XL Regional	Mini-USB
TomTom	ONE XL S	Mini-USB
Toshiba	MEU202-SL	Mini-USB
Toshiba	MEU202-SL	Mini-USB
Voice Star	VS600	Mini-USB