



POWERED BY  
**LENMAR®**  
**SOLOXP-J**

OEM Battery	Lenmar Battery	Adapter Plate
Canon BP-2L12	LIC2L12 & LIC2L24	XPA1
Canon BP-2L14	LIC2L12 & LIC2L24	XPA1
Canon BP-2L5	LIC2L12 & LIC2L24	XPA1
Canon BP-911	LIC911	XPA1
Canon BP-914	LIC911	XPA1
Canon BP-915	LIC911	XPA1
Canon BP-924	LIC924	XPA1
Canon BP-927	LIC924	XPA1
Canon BP-930	LIC924	XPA1
Canon BP-941	LIC941	XPA1
Canon BP-945	LIC941	XPA1
Canon NB-2L	DLC2L	XPA1
Canon NB-2LH	DLC2L	XPA1
FujiFilm NP-100	DLJ101	XPA4
FujiFilm NP-80	DLF80	XPA4
Hitachi VMBPL13A	LIH13	XPA4
Hitachi VM-BPL13A	LIH13	XPA4
Hitachi VMBPL27A	LIH27	XPA4
Hitachi VMBPL30A	LIH27	XPA4
Hitachi VMBPL60A	LIH27	XPA4
JVC BN-V101U	DLJ101	XPA4
JVC BN-V207U	LIJ207	XPA12
JVC BN-V214U	LIJ214	XPA12
JVC BN-V408U	LIJ408	XPA1
JVC BN-V416U	LIJ416	XPA1
JVC BN-V428U	LIJ428	XPA1
JVC BN-V607	LIJ607	XPA4
JVC BN-V712U	LIJ712	XPA4
JVC BN-V714U	LIJ712	XPA4
JVC BN-V812U	LIH13	XPA4
JVC BN-V814U	LIH13	XPA4
JVC BN-VF707U	LIJF707	XPA8
JVC BN-VF714U	LIJF714	XPA8
JVC BN-VF733U	LIJF733	XPA8
JVC BN-VF808	LIJVF823	XPA12
JVC BN-VF815	LIJVF823	XPA12
JVC BN-VF823	LIJVF823	XPA12
Konica Minolta NP-700	DLM700	XPA8
Panasonic AGBP15P	DLP4090	XPA4
Panasonic AGBP25	LIH13	XPA4
Panasonic CGR-B/202A1B	DLP4090	XPA4
Panasonic CGR-B/403AB	LIH27	XPA4
Panasonic PV-DB5	LIH13	XPA4
Panasonic PV-DBP5	DLP4090	XPA4
Panasonic VW-VBD1	DLP4090	XPA4
Samsung SB-L110	LISG110	XPA1
Samsung SB-L160	LISG160	XPA1
Samsung SB-L220	LISG220	XPA1
Samsung SB-L320	LISG320	XPA1
Samsung SB-L480	LISG480	XPA1
Samsung SB-LS160	LISGM160	XPA12
Samsung SB-LS80	LISGM80	XPA12
Samsung SB-LSM160	LISGM160	XPA12
Samsung SB-LSM80	LISGM80	XPA12
Sharp BT-L12U	LIV12	XPA8
Sharp BT-L2U	LIV2	XPA8
Sony "L" Series	LIS550H	XPA4
Sony "M" Series	LISM50	XPA4
Sony NP-F330	LIS330	XPA4
Sony NP-F550	LIS550H	XPA4
Sony NP-F560	LIS550H	XPA4
Sony NP-F570	LIS550H	XPA4
Sony NP-F730H	LIS730H	XPA4
Sony NP-F750	LIS750H	XPA4
Sony NP-F760	LIS750H	XPA4
Sony NP-F770	LIS750H	XPA4
Sony NP-F950	LIS950H	XPA4
Sony NP-F960	LIS950H	XPA4
Sony NP-F970	LIS950H	XPA4
Sony NP-FM50	LISM50	XPA4
Sony NP-FM500H	DLS500H	XPA4
Sony NP-FM70	LISQM71	XPA4
Sony NP-FM71	LISQM71	XPA4
Sony NP-FM90	LISQM91	XPA4
Sony NP-FM91	LISQM91	XPA4
Sony NP-FQM71	LISQM71	XPA4
Sony NP-FQM91	LISQM91	XPA4



**XPA1**



**XPA4**



**XPA8**



**XPA12**