


POWERED BY
LENMAR[®]
SOLOXP-OC

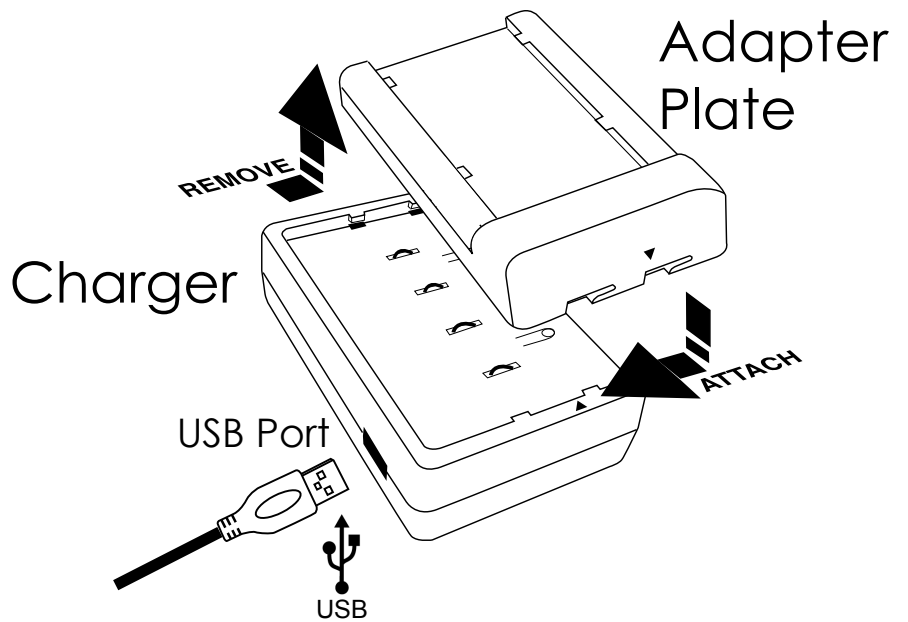

XPA3



XPA6



XPA16



XPA18

OEM Battery	Lenmar Battery	Adapter Plate
Canon NB-1L	DLC1L	XPA3
Canon NB-1LH	DLC1LH	XPA3
Canon NB-3L	DLC3L	XPA3
Canon NB-5L	DLC5L	XPA16
Casio NP-20	DLCS20	PSC20-XPA18
Casio NP-20DBA	DLCS20	PSC20-XPA18
Casio NP-30	DLF60	XPA6
Casio NP-40	DLCS40	XPA16
FujiFilm NP-120	DLF120	XPA6
FujiFilm NP-40	DLF40	XPA6
FujiFilm NP-60	DLF60	XPA6
Kodak KLIC-5000	DLF60	XPA6
Kodak KLIC-5001	DLKA5	XPA6
Kodak KLIC-7005	DLF40	XPA6
Kodak KLIC-8000	DLK8000	XPA16
Nikon EN-EL1	DLNEL1	XPA3
Nikon EN-EL11	DLNEL11	PSC20-XPA18
Nikon EN-EL12	DLNEL12	XPA16
Nikon EN-EL5	DLNEL5	XPA6
Olympus LI-10B	DLO10B	XPA3
Olympus LI-12B	DLO10B	XPA3
Olympus Li-40B	DLO40B	XPA6
Olympus Li-42B	DLO40B	XPA6
Panasonic CGA-S004A/1B	DLP004	XPA6
Panasonic DMW-BCB7	DLP004	XPA6
Panasonic VW-VBA10	DLF60	XPA6
Panasonic VW-VBA21	DLF60	XPA6
Pentax D-Li2	DLF60	XPA6
Pentax D-Li63	DLO40B	XPA6
Pentax D-Li7	DLF60	XPA6
Pentax D-Li78	DLNEL11	PSC20-XPA18
Pentax D-Li8	DLF40	XPA6
Ricoh DB-80	DLNEL11	PSC20-XPA18
Rollei 02491-0028-00	DLRP8300	PSC20-XPA18
Rollei NP-83	DLRP8300	PSC20-XPA18
Samsung SLB-10A	DLSG10A	XPA16
Sanyo DB-L20	DLSAL20	PSC20-XPA18
Vivitar 02491-0028-00	DLRP8300	PSC20-XPA18